


- ① Turn the ignition switch to the **I** (On) position.
- ② Shift the transmission to Neutral (**N** indicator comes on).
- ③ **Using the start button**
Press the start button with the throttle completely closed. Release the start button as soon as the engine starts.
- ④ If you cannot start the engine, open the throttle slightly (about 3 mm, without freeplay).

About 3 mm, without freeplay

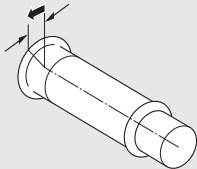

If the engine does not start: Using the start button

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Follow the normal starting procedure.
- ③ If the engine starts with unstable idle, open the throttle slightly.
- ④ If the engine does not start, wait 10 seconds, then follow steps ① & ② again.

If Engine Will Not Start ➔ **P.77**