



Instruments *(Continued)*

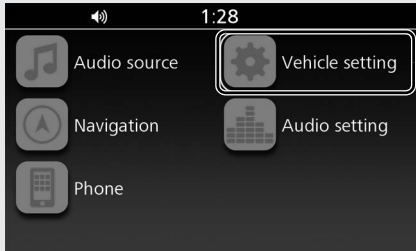
Vehicle Setting

You can configure the vehicle settings.






The vehicle settings are enabled with the ignition switch in ON.






The vehicle settings are disabled while the vehicle is in motion.

Rotate  or press ▲ / ▼ / ◀▶ on the 4-way key switch to select a setting menu. Press  or [ENT] switch to set your selection.



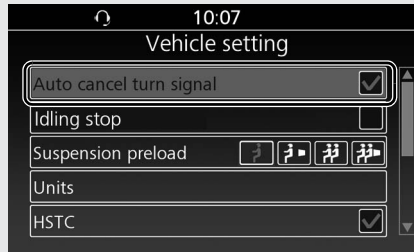
The vehicle settings contain the following:



- [Auto cancel turn signal]  P. 28
- [Idling stop] **GL1800BD/D/DA Canada model only**
 P. 28
- [Suspension preload] **GL1800/D/DA**
 P. 29
- [Units]  P. 30
- [HSTC] **GL1800/D/DA**  P. 31

- [Auto Dimmer Meter Illumination]  P. 32
- [Day / Night]  P. 32
- [Ext. Amp]  P. 33
- [EQ1/EQ2] (Equalizer)  P. 33
- [Head light opening]  P. 33

Auto Cancel Turn Signal

You can enable/disable turn signal automatic cancellation.

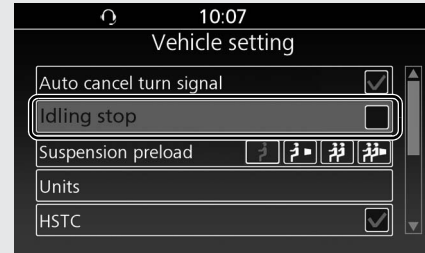




- 1 Select [Auto cancel turn signal], and then press  or [ENT] switch to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen.  P. 24

Default: On (selected)

Idling Stop **GL1800BD/D/DA Canada model only**

You can enable/disable the Idling Stop system.



- 1 Select [Idling stop], and then press  or [ENT] switch to change to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen.  P. 24

Default: Off (deselected)