

Instruments *(Continued)*


GL1800/B

Indication	Gear position
I	1st gear
II	2nd gear
III	3rd gear
IV	4th gear
V	5th gear
VI	6th gear
N	Neutral
R	Reverse*
-	Shifting failure

* Except GL1800B USA model

" - " flashes when the transmission is not shifted properly.

Riding Mode Indicator

Refer to "Riding Mode"  P.120

D (AT MODE) Indicator ()

GL1800BD/D/DA

Comes on when AT MODE is selected.

 P.116

Idling Stop OFF Indicator ()

GL1800BD/D/DA Canada model only

Comes on briefly when the ignition switch is turned ON.


Comes on when the Idling Stop system is off.

Idling Stop system:  P.61

Walking Speed Mode Indicator ()

GL1800BD/D/DA

Comes on when in Walking Speed mode.

Walking Speed Mode:  P.117