
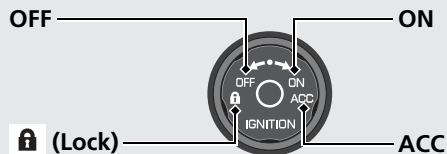


Ignition switch

 
Switches the electrical system on/off, locks the steering.

Make sure that the Honda SMART Key is activated  P.56

 
and enter the operating range.  P.57



 
(Lock)




OFF





ON

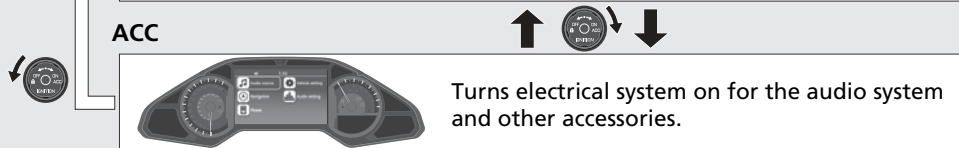

ACC



 : Turning the ignition switch clockwise.

 : Turning the ignition switch counterclockwise.