

GL1800/B

Headlight dimmer switch

- ▲☰☷ : High beam
- ▼☰☷ : Low beam
- ☰☷PASS : Flashes the high beam headlight.

VOL lever

Push up or down to adjust the audio system volume.

➡ P.71

(Voice control) switch

- Press to receive, reject or end a call. ➡ P.104
- Starts Siri if Apple CarPlay is available. ➡ P.103

Horn button

Turn signal switch

- The turn signal will automatically stop when you complete the turn.
- When used for a lane change, the turn signal automatically stops after 7 seconds or after riding 131 yards (120 m).
- ▶ You can manually cancel the turn signal by pressing the switch in.
- ▶ In some cases, the timing at which the turn signal stops is changed.
- ▶ Always use the recommended tires to ensure correct automatic cancellation operation.

To enable or disable the turn signal automatic cancellation: ➡ P.28

4-way key/ENT switch

- Press the 4-way key switch in the ▲ / ▼ / ◀◀ / ▶▶ directions to select the available choices.
- Press **ENT** switch to set your selection. ➡ P.24

Windscreen adjusting lever

Push up or down to adjust the windscreen height. ➡ P.136

(Home) switch

Press to return to the Home screen. ➡ P.24

(Back) switch

Press to return to the previous screen. ➡ P.24

(Source/Private Mode) switch

- Press to change the audio mode. ➡ P.71
- Press and hold to enable/disable the private mode. ➡ P.90

R Reverse mode switch **GL1800 and GL1800B Canada model**

Press to enter the reverse mode. ➡ P.119

Reverse button **GL1800 and GL1800B Canada model**

While pressing the switch, your vehicle will back up in the reverse mode. ➡ P.119

