 




## To Change the Audio Mode

Press  switch to change the audio mode. Cycles through the audio modes on the information bar as follows:

[FM] → [AM] → [SXM] (option) → [USB] → [iPod] → [Bluetooth] → [AUX] (option)






Information bar

- [FM]  P. 92
- [AM]  P. 92
- [SXM]


This function is optional. Optional antenna kit and subscription of SiriusXM® are required. Contact your dealer for details.

SiriusXM® is a registered trademark of SiriusXM Radio, Inc.


- [USB]  P. 98
- [iPod]  P. 98
- [Bluetooth]  P. 98
- [AUX]


This function is optional. Contact your dealer for details.

## To Select the Audio Output Device

You can switch the audio output between the paired *Bluetooth*® headsets and the speakers by pressing  button on the center panel.

The selected device is displayed by the audio output status icon on the screen.

 : Audio output is from the *Bluetooth*® headsets.

 : Audio output is from the speakers.




Audio output status icon

## To Adjust the Volume

You can adjust the volume settings for the speakers and headsets separately.

The system has following unique volume levels. Adjust the volume while in the individual modes.

[Audio vol.]/[Navi vol.]/[Ring tone vol.]/  
[Phone vol.]/[CB vol. (option)]

Each volume can also be set from the menu.  P. 76

While the vehicle is in motion, you can adjust the volume of the current audio mode by rotating the interface dial.

 P. 69