

# Cruise Control

The cruise control system allows you to maintain a steady speed within specified range.

The available speed setting range and operating gear are listed below:

	GL1800BD/D/DA	GL1800/B
Available speed setting range	20 - 100 mph (30 - 160 km/h)	30 - 100 mph (50 - 160 km/h)
Operating gear	From 3rd to 7th gear	From 3rd to 6th gear

When cruise control is on, your speed will still vary slightly, particularly going up and down hills.

Cruise control is intended for use only on straight, uncongested highways. Do not use cruise control on city streets, winding roads, during bad weather, or at any other time when you need total control of the throttle.

## ⚠ WARNING

Improper use of the cruise control can lead to a crash in which you could be seriously hurt or killed.

Use the cruise control only when traveling on open highways in good weather.

### To Set Cruise Control

- 1 Make sure the traveling speed and operating gear are conformed to requirement of the system.  
Any speed other than available range will not be memorized.
- 2 Press the cruise control main switch.  
(The CRUISE MAIN indicator will come on.)
- 3 Accelerate to the desired speed.
- 4 Push the cruise control lever to [SET/-] side.  
(The CRUISE SET indicator will come on.)  
Your current traveling speed is memorized.

