


Cruise Control *(Continued)*


To Change the Set Speed

To Fine Tune the Set Speed

Display the cruise control set speed on the INFO 1 display.  P. 34

- To increase the set speed: tap the cruise control lever to [RES/+] side.
- To decrease the set speed: tap the cruise control lever to [SET/-] side.

The set speed is displayed in the INFO 1 display.

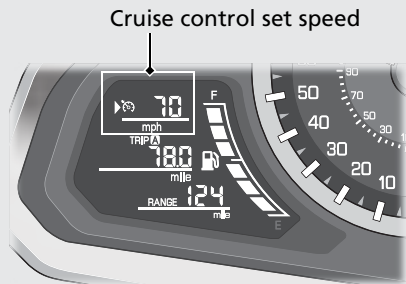

Each quick tap (brief push and release) on either side will change your speed by 1 mph or 1 km/h (depending on mileage meter set unit).

Any speed other than possible setting range will not be indicated (stops at the upper or lower limit speed).

To Change the Set Speed Continuously

- To increase the set speed: push and hold the cruise control lever to [RES/+] side. The system will accelerate your vehicle automatically. When you reach the desired speed, release the cruise control lever.

If the cruise control lever is pushed and held to [RES/+] side continuously, the set speed indicated in the INFO 1 display stops at the upper limit of the possible setting range.

- To decrease speed: push and hold the cruise control lever to [SET/-] side. The system will automatically slow your vehicle. When you reach the desired speed, release the cruise control lever. If the cruise control lever is pushed and held to [SET/-] side continuously, the set speed indicated in the INFO 1 display stops at the lower limit of the possible setting range.

To Manually Increase the Set Speed

- 1 Use the throttle to accelerate until you reach the desired speed.
- 2 Push and release the cruise control lever to [SET/-] side.

To Manually Increase Vehicle Speed

- 1 Use the throttle in the normal manner to accelerate.
- 2 To return to the set speed, close the throttle and coast without applying the brakes. The cruise system will maintain the speed you previously set.

To Cancel Cruise Control

To Disengage the System

- Press the cruise control main switch. (The CRUISE MAIN indicator goes off and the set speed will be erased from memory.)