


Comfort & Convenience Adjustment

Handle Grip Heater

This vehicle is equipped with a handle grip heater that warms up your hands during ride.

Wear gloves to protect your hands from the heated grips.

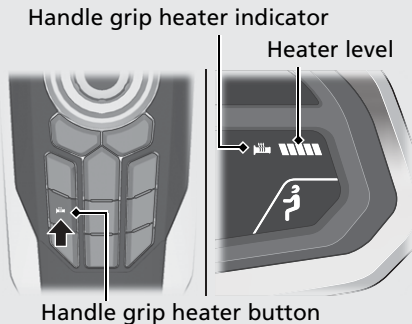

Heater Level:

The selected heater level is changed each time the handle grip heater button is pressed.

Handle Grip Heater Indicator:

Displayed when the handle grip heater is on.

If the handle grip heater indicator

blinks: ➡ P.183


To Operate the Handle Grip Heater

- 1 Start the engine. ➡ P.112
- 2 Press the handle grip heater button. The handle grip heater is on.
- 3 Select the heater level by pressing the switch.
▶ Do not leave the handle grip heater in the high position for a long time on a warm day.

To Turn Off the Handle Grip Heater

Press and hold the handle grip heater button until the handle grip heater indicator and heater level display goes off.

Do not use the handle grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.

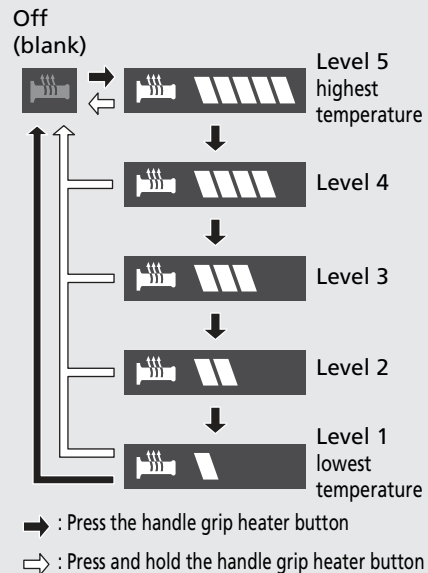

Maintains the selected level when the ignition switch is turned OFF and back to ON.