

### Passenger Seat Heater Switch

The passenger seat heater switch is located on the left saddlebag.

The passenger seat heater switch has 6 positions (OFF, 1, 2, 3, 4, 5 indicated on the switch).

### To Operate the Passenger Seat Heater

- 1 Start the engine. **➔ P.112**
- 2 Select the heater level by rotating the passenger seat heater switch. To set the desired heater level, align the number on the switch with the ► mark nearby the switch.
  - The highest temperature is 5 and the lowest temperature is 1.
  - Do not leave the seat heater in the high position for a long time on a warm day.

### To Turn Off the Passenger Seat Heater

Rotate the passenger seat heater switch and align the OFF on the switch with the ► mark.

The passenger seat heater indicator goes off.



Do not use the seat heater with the engine at idle for a long time. It may result in a low (or dead) battery.


Do not use the seat heater when the seat is torn, cut or damaged as you can get burned.

Do not apply excessive stress to the seat, e.g. by securing articles to it with tie-down straps during transportation.

### Seat Heater Indicators

Displayed when each seat heater is on. If the seat heater indicator blinks, see your dealer for servicing.

#### Rider seat heater indicator

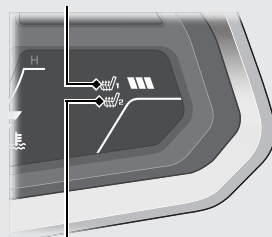

Passenger seat heater indicator

### If the seat heater indicators blink:

**➔ P.184**