

Adjusting the Rear Suspension

GL1800B/BD

You can adjust the spring preload of the rear suspension to suit the load or the road surface.

NOTICE

Do not turn the adjuster beyond its limits.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.

Spring Preload

Remove the right side cover. ► P. 156
Turn the adjuster clockwise to increase spring preload (hard), or turn the adjuster counterclockwise to decrease spring preload (soft).

To set the standard position, turn the adjuster counterclockwise until it will no longer turn (lightly seat), and then turn the adjuster clockwise until it clicks. This click is position 0 (minimum setting). The standard position is 9 clicks from the minimum setting (total setting: 33 clicks).

