


## Engine Oil ► Changing Engine Oil

4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap/dipstick, drain bolt and sealing washer to drain the oil.
  - Discard the oil at an approved recycling center.

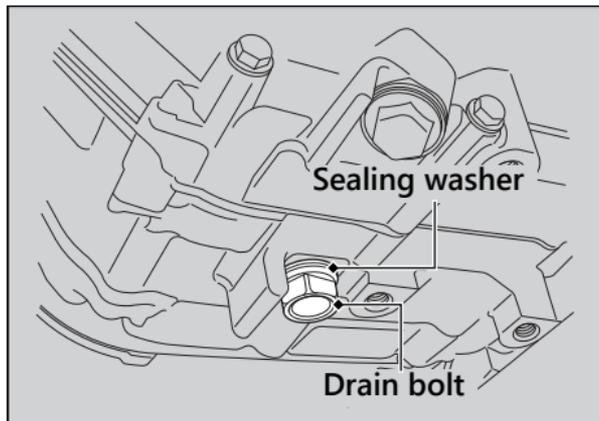

6. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf·ft (24 N·m, 2.4 kgf·m)

7. Fill the crankcase with the recommended oil (► P. 48, ► P. 116) and install the oil fill cap/dipstick.

**Required oil**  
**When changing oil:**  
1.0 US qt (0.9 L)

8. Check the oil level. ► P. 60
9. Check that there are no oil leaks.