

Items		Frequency *1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line				I	I	I	I	I	I		-
	Throttle Operation				I	I	I	I	I	I		75
	Air Cleaner *2						R			R		55
	Crankcase Breather *3				C	C	C	C	C	C		76
	Spark Plug				I	R	I	R	I	R		58
	Valve Clearance				I	I	I	I	I	I		-
	Engine Oil			R	R	R	R	R	R	R	1 Year	61
	Engine Oil Strainer Screen					C		C		C		-
	Engine Oil Centrifugal Filter					C		C		C		-
	Engine Idle Speed			I	I	I	I	I	I	I		-
	Evaporative Emission Control System *4						I			I		-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➡ P. 110).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace