

If the engine does not start:

- ① Turn the ignition switch to the OFF position.
- ② Open the throttle fully.
- ③ Crank the engine several times with the kickstarter.
- ④ Follow step 1 under "Warm Engine."
- ⑤ If the engine starts, open the throttle slightly if idling is unstable.
- ⑥ If the engine does not start, wait 10 seconds before trying steps ①-④ again.

If Engine Will Not Start **P.72**