
Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence.
➔ P. 21
- Check that there is petrol in the fuel tank.
- Check for a blown fuse. ➔ P. 89
- Check for a loose battery connection or battery terminal corrosion. ➔ P. 37, 47
- Check the condition of the battery. ➔ P. 82

If the problem continues, have your motorcycle inspected by your dealer.