

## Front Wheel

### Removal

1. Place your motorcycle on its centre stand on a firm, level surface.
2. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
3. Remove the speedometer cable by pushing the tab.
4. Remove the front brake adjusting nut and disconnect the front brake cable from the brake arm.
5. Remove the front axle nut.
6. Remove the front axle shaft, front wheel, and side collar.

