



## Headlight Bulb

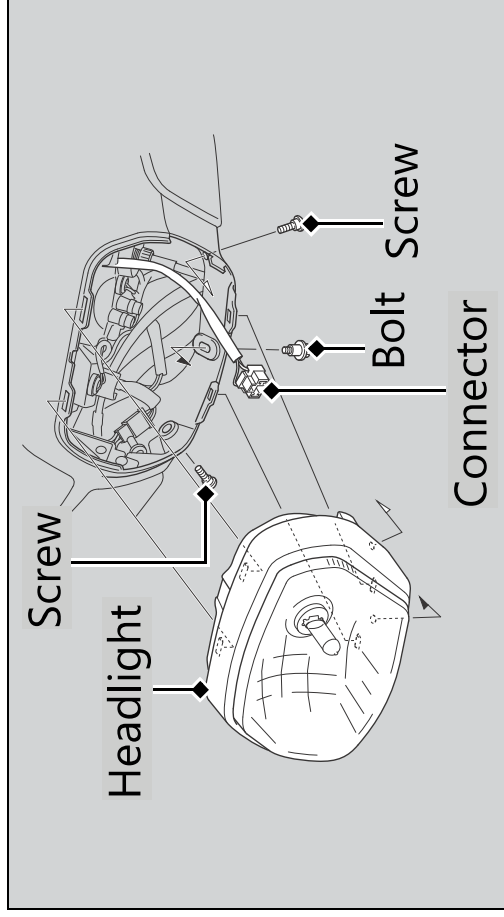

1. Remove the screws.
2. Remove the bolt.
3. Gently pull the lower end of the headlight forward and remove it.
4. Disconnect the connector.
5. Remove the rubber dust cover.
6. Slightly press down the pin and turn it counterclockwise until it releases.

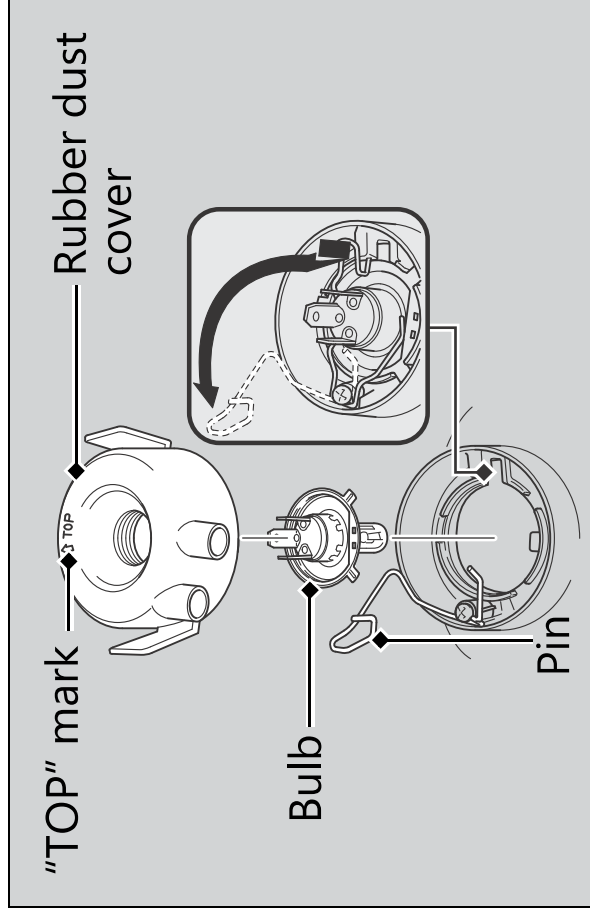

7. Remove the bulb.
  8. Install a new bulb and reinstall the parts in the reverse order of removal.
    - ▶ Install the rubber dust cover with its "TOP" mark facing up.
  9. Adjust the headlight aim. ➤ P. 70
- Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.