


## Position Light Bulb

The right and left position light bulbs replacement can be done in the same way.

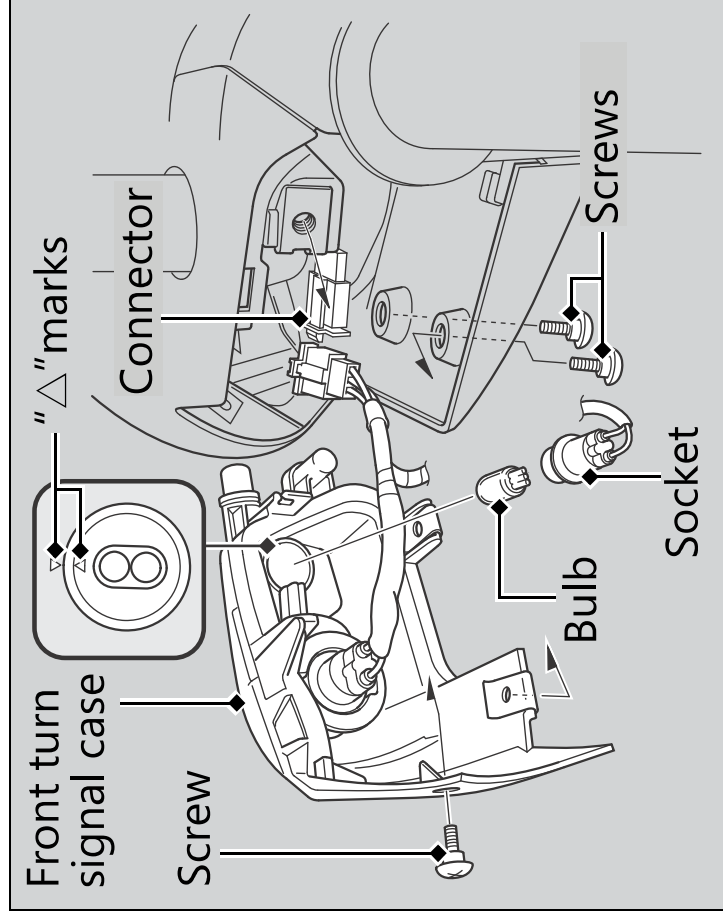

1. Remove the front turn signal case by removing the screws.
2. Disconnect the connector.
3. Pull out the socket without turning.

4. Pull out the bulb without turning.
5. Install a new bulb and reinstall the parts in the reverse order of removal.
  - Install the socket and make sure that the "△" marks on the socket and position light housing are aligned.