


## Brakelight/Taillight Bulb

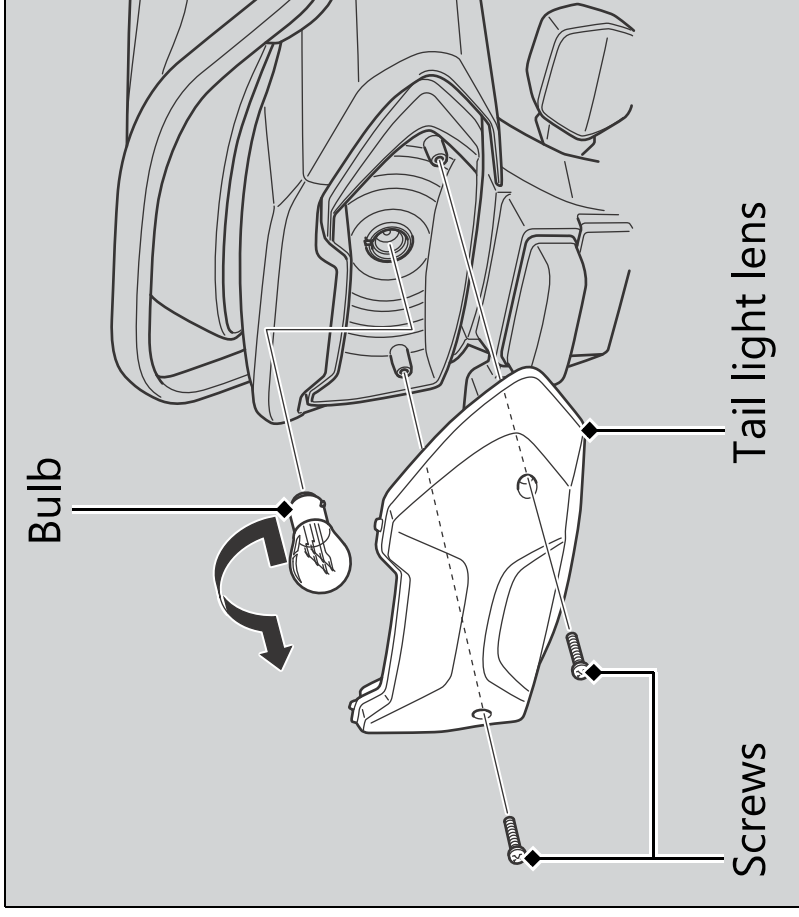

1. Remove the tail light lens by removing the screws.
2. Slightly press the bulb in and turn it counterclockwise.
3. Install a new bulb and reinstall the parts in the reverse order of removal. Tighten the screws.
  - After putting back the lens packing in place, install the tail light lens.