


Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 38

Fuse Box Fuses

1. Remove the centre cover. ► P. 47
2. Remove the battery cover. ► P. 47
3. Open the fuse box covers.
4. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - The spare fuses are located above the battery box.
5. Close the fuse box covers.
6. Install the battery cover.
7. Install the centre cover.

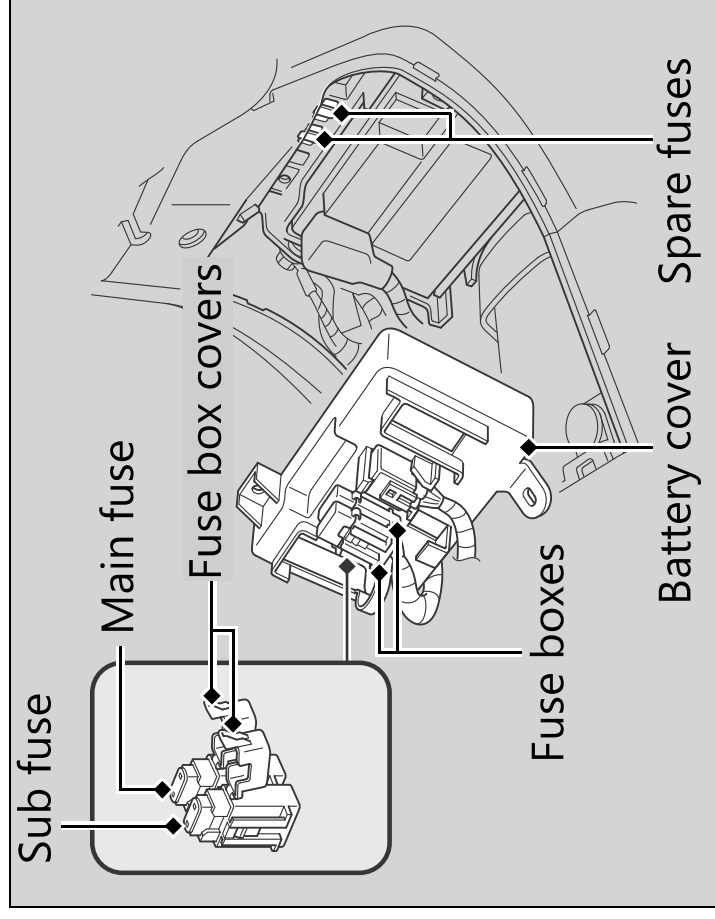

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.