



10. Install the oil strainer screen, spring and oil plug and tighten.

Torque: 15 lbf-ft (20 N·m, 2.0 kgf·m)

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf-ft (24 N·m, 2.4 kgf·m)

12. Fill the crankcase with the recommended oil (► P. 55, ► P. 119) and install the oil fill cap/dipstick.

Required oil

When changing oil & cleaning the strainer screen:

0.69 US qt (0.65 L)

When changing oil only:

0.68 US qt (0.64 L)

13. Check the oil level. ► P. 69
14. Check that there are no oil leaks.