


Inspecting the Brake Lever Freeplay

1. Place your scooter on its center stand on a firm, level surface.
2. Measure the distance of the front and rear brake levers before each brake starts to take hold.


Freeplay at the tip of the brake levers:

$3/8 - 13/16$ in (10 - 20 mm)

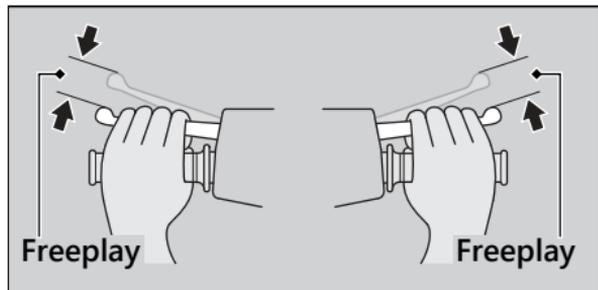

Adjusting the Rear Brake Lever Freeplay

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead. Make sure the cut-out on the adjusting nut is seated on the brake arm pin when adjusting the freeplay.

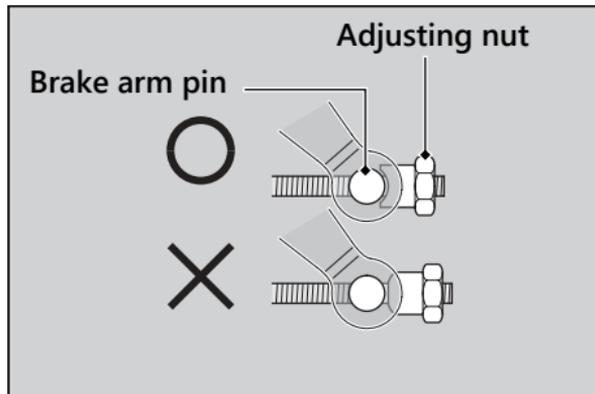

If proper adjustment cannot be obtained by this method, see your dealer.