

# Spark Plug

## Spark Plug Recommendation

standard spark plug	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
---------------------	--

Use only the recommended type of spark plug in the recommended heat range.

### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 99 .

1. Remove the seat (page 110).
2. Loosen the screw ( 1 ) and remove the clip ( 2 ).
3. Remove the resonance chamber ( 3 ).
4. Unhook the rubber cover ( 4 ).
5. Clean any dirt from around the spark plug base.
6. Disconnect the spark plug cap ( 5 ). Take care to avoid damaging the spark plug wire when disconnecting the cap.
7. Using the spark plug wrench provided in the tool kit, remove the spark plug.

### UNDER SEAT

- (1) screw
- (2) clip
- (3) resonance chamber
- (4) rubber cover
- (5) spark plug cap

