

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600		1200
			km	150	1000		2000
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
	DRIVE CHAIN	NOTE 1, 2	I, L	[I, L: EVERY 300 mi (500 km) or 50 operating hours]		134	
	DRIVE CHAIN SLIDER			I	I	136	
*	BRAKE SHOES WEAR	NOTE 1			I	124	
	BRAKE SYSTEM		I	I	I	118	
	GUARDS			I	I	133	
*	CLUTCH SYSTEM		I	I	I	111	
*	SUSPENSION			I	I	—	
*	SPARK ARRESTER			C	C	117	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	126	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 194](#)).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.