


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

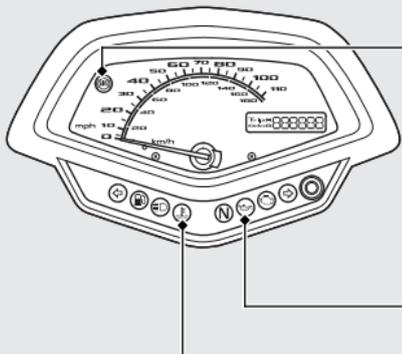

 **High coolant temperature indicator**

**If it comes on while riding:** ➔ P.91

**VT1300CXA**

 **ABS (Anti-lock Brake System) indicator**

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ P.93

 **Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

**If it comes on while engine is running:**

➔ P.92