


Tire Puncture ► Removing Wheels

5. While holding the outer end of the rear axle shaft with a wrench, remove the rear axle nut and washer.
6. Loosen the axle holding bolt.
7. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.

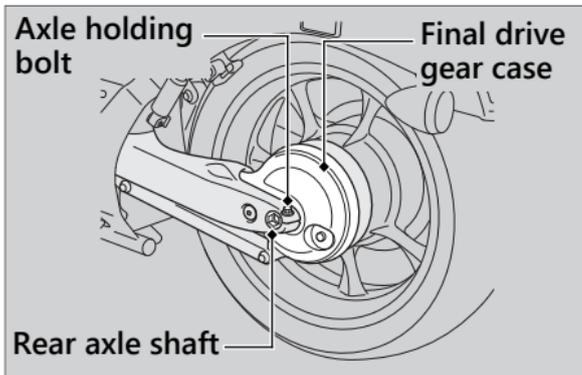

8. Cover the right swingarm with protective tape or an equivalent.
9. Remove the rear brake bracket bolt.
10. Slide the rear axle shaft to the left side until the rear wheel can be removed.
 - Do not pull the rear axle shaft out completely.
11. Remove the rear brake bracket.
12. Move the wheel to the right to separate it from the final drive gear case.