Removal from Storage

Refer to Safety Precautions on page 60.

- 1. Uncover and clean your motorcycle.
- 2. If your motorcycle has been stored for more than four months change the engine oil (page 86).
- If your motorcycle has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
- 4. Charge the battery (page 134) as required. Install the battery.
- 5. Perform a pre-ride inspection (page 33), then test-ride your motorcycle at low speeds.