


Indicators

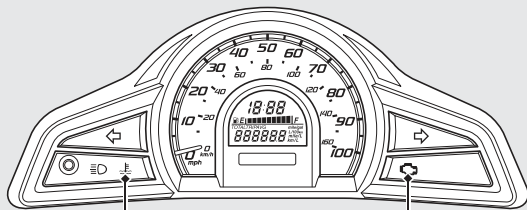

High coolant temperature indicator

If it comes on while riding:

(P82)



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the

Ⓞ (Run) position.

If it comes on while engine is running:

(P83)