

## Vehicle Identification Number

The VIN and engine serial numbers uniquely identify your scooter and are required in order to register your scooter. They may also be required when ordering replacement parts.

The VIN is stamped on the rear of the frame body inside the center compartment and also appears on the Safety Certification Label attached inside the leg shield.

The engine number is stamped on the left side of the crankcase.

You should record these numbers and keep them in a safe place.

