

Maintenance Schedule

Items		Frequency	Odometer Reading*1									
			× 1,000 mi	0.6	4	8	12	16	20	24	Refer to page	
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line					I		I		I	–	
	Fuel Strainer Screen				C	C	C	C	C	C	–	
	Throttle Operation					I		I		I	74	
	Carburetor Choke					I		I		I	–	
	Air Cleaner*2						R			R	58	
	Spark Plug				I	R	I	R	I	R	59	
	Valve Clearance			I	I	I	I	I	I	I	–	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 2,000 mi (3,200 km) or 6 months: R									52
	Engine Oil Filter			R		R		R		R	54	
	Engine Idle Speed			I	I	I	I	I	I	I	–	
	Secondary Air Supply System					I		I		I	–	
	Evaporative Emission Control System*3						I			I	–	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual
-  (2 P. 107). : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C : Clean
- L : Lubricate
- R : Replace