

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” 2 P. 40

1. Remove the left side cover. 2 P. 48
2. Open the battery compartment cover.
3. Pull the fuses out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the battery compartment cover.
5. Reinstall the left side cover.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

