


Tyre Puncture ▶ Removing Wheels

- ▶ Take care to prevent the brake caliper from scratching the wheel during removal.

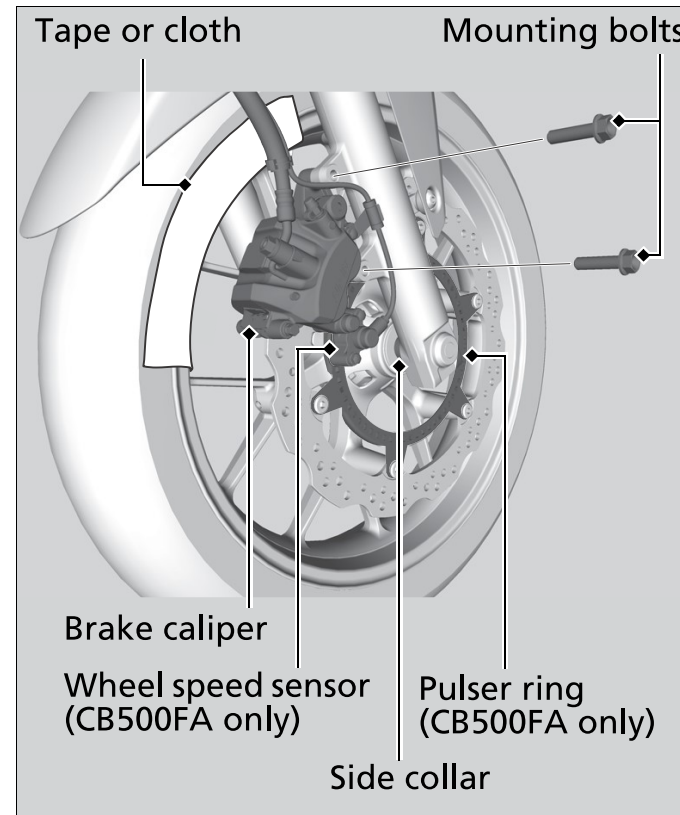

(CB500FA only)

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel

Removal

1. Park on a firm, level surface.
2. Cover the right side of the front wheel and brake caliper with protective tape or cloth.
3. On the right side, remove the mounting bolts and brake caliper.
 - ▶ Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - ▶ Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - ▶ Do not pull the brake lever while the brake caliper is removed.

continued 91