Battery

The battery is located in a compartment under the seat.

UNDER SEAT

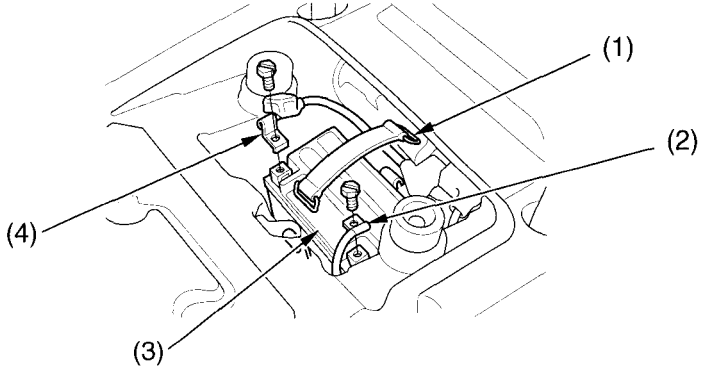

(1) rubber band
(2) negative (−) terminal lead
(3) battery
(4) positive (+) terminal lead

1. Make sure the ignition switch is OFF (○).
2. Remove the seat (page 90).
3. Release the rings and remove the rubber band (1).
4. Disconnect the negative (−) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).
5. Remove the battery.

(cont'd)