


After adjustment, confirm the freeplay of the brake lever.  
Make sure the brake arm, spring and fastener are in good condition.

**NOTICE**  
Do not turn the adjuster beyond its natural limits.

## Inspecting the Rear Brake Pedal Freeplay

1. Place your motorcycle on its centre stand on a firm, level surface.
2. Measure the distance of the rear brake pedal before the starts to take hold.

**Freeplay at the tip of the brake pedal:** 20 to 30 mm (0.8 to 1.2 in)

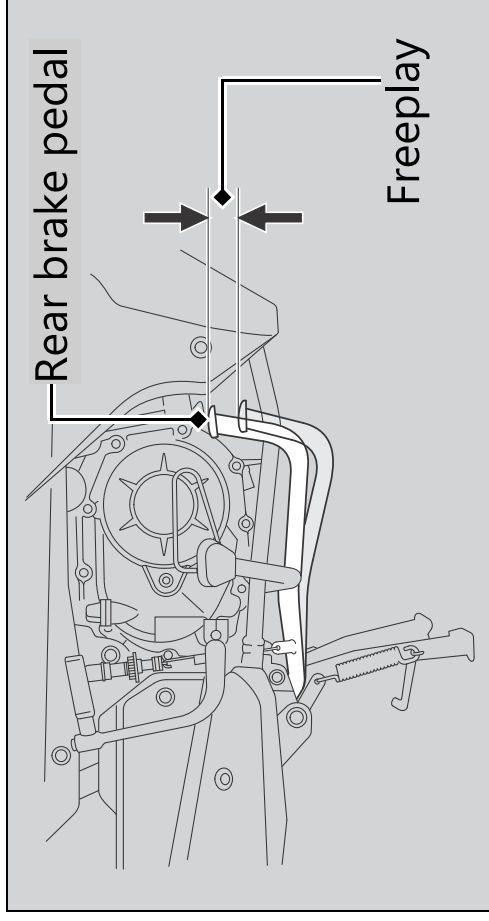

Make sure the brake rod, brake arm, spring and fastener are in good condition.