


Adjusting the Front Suspension

CBR1000RR/RA

Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is 7 1/2 turns from the full soft position.

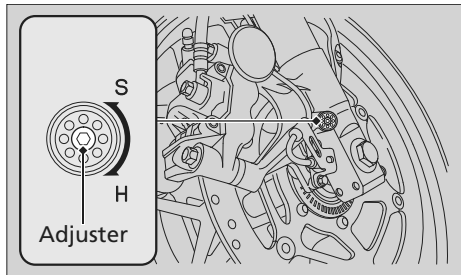

Rebound Damping

You can adjust the rebound damping by the TEN adjuster to suit the load or the road surface.

Turn clockwise to increase rebound damping (hard), or turn counterclockwise to decrease rebound damping (soft). The standard position is 4 1/2 turns (**except VI A and VII AC type**)/ 4 3/4 turns (**VI A and VII AC type**) from the full hard position.

